

DLQS Quick Stick Series

TRAFFIC DIRECTORS and WARNING STICKS



Please Note: These instructions are provided as a general guideline only. Specific mounting and/or wiring, may be necessary and are the sole responsibility of the installer. Star Headlight & Lantern Co., Inc. assumes no responsibility for the integrity of the installation for this or any of its products.



WARNING!

This light utilizes high-intensity LED Lamps. DO NOT stare directly into the light while it is on, as momentary blindness and/or permanent eye damage may occur.



PROUDLY MADE IN THE USA
An ISO 9001:2008 Certified Company



Star Headlight & Lantern Co., Inc.

455 Rochester Street Avon, NY 14414 Phone: 585-226-9787 FAX: 888-478-2797

STAR
WARNING
SYSTEMS

STAR SIGNAL
VEHICLE PRODUCTS

BRADFORD
Vehicle Solutions

www.starheadlight.com

PLIT563 REV. C 6/18/18


Before beginning the installation:

- Determine where the Traffic Director is to be mounted (on your lightbar, on your roof, in your rear window, etc).
- Check to see that there are no obstructions hindering the visibility of your traffic director.
- Determine how you will be controlling the traffic director (using independent switches, a siren controller, etc.).
- You will also need to determine the path your cable will take. The cable should exit the left side of the Traffic Director when you are facing the lights on the stick.




Mounting Instructions

1. There are two slots along the length of the lightstick that can be used to facilitate mounting. Depending upon your application, slide the two enclosed #10 carriage bolts into the appropriate slot (rear or bottom).
2. Slide them along the channel to the desired location and mark the locations for your mounting holes on the mounting surface.
3. Drill your holes and mount the light using the enclosed washers and nuts.

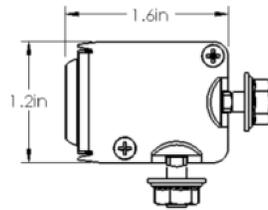


We also include two L-Brackets to facilitate mounting. These are optional and do not need to be used.

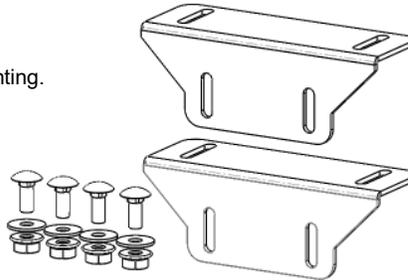

Because of the wide variety of mounting applications, Star Headlight & Lantern Co., Inc. assumes no responsibility for the secure mounting of this light. It is the responsibility of the installer and/or owner to ensure the lightbar is mounted securely. Check your light every time you use the vehicle to ensure that it is mounted securely.


Electrical Connections

Wiring for 8- or 6-Head Units

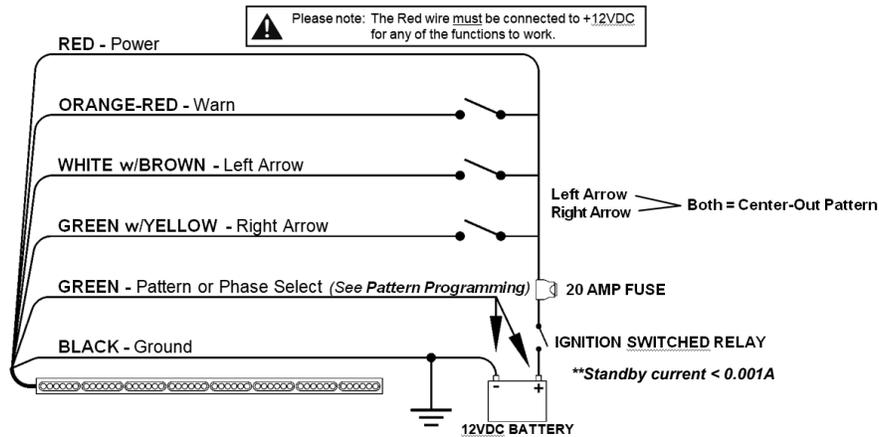

Note: Left, Right, and Center-Out patterns will override the Warn Pattern on the heads for which they are enabled.

Wiring for 4-Head Units

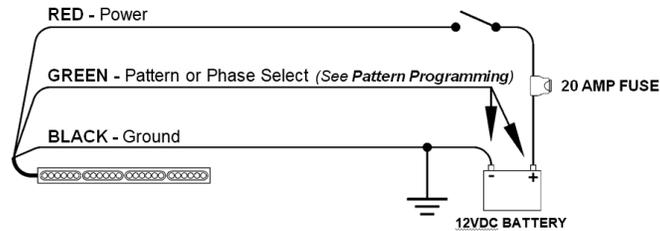

Programming

Programming is optional. If the default settings are acceptable, skip to the Operation section on page 5.

Programmable features include the following:

- Pattern Selection (both WARN and Traffic Directing Patterns)
- Phase Selection (which heads alternate from one another)
- Head Enable (which heads activate)
- Resetting the Factory defaults

(Programming CONT'D)

Pattern Programming

Not only does this light have several Patterns to select from, but it also incorporates advanced programming that allows you to select which heads flash On and Off with one another (*Phase*), and which heads are active in any of the functions (*Head Enable*). Review the various section below and on the following two pages for details on these options.

Basic Pattern Selection

The first step in programming is to select a basic pattern for each of the 2 modes:

- Warn Function (*Orange w/Red*)
- Traffic Directing Patterns (L, R, and C-O) (*Green w/Yellow, White w/Brown, or Both*)

1. Connect the Red wire to power and the Black wire to Ground.
2. Activate the function you wish to program by connecting the corresponding wire to +12VDC.
3. Touch and release the Pattern Select wire to +12VDC to scroll through the patterns shown to the right. (*Traffic Director L, C-O, R shown below.*)
Note: At any time you can shortcut to the patterns with the asterisks by holding the pattern select wire to +12VDC for the indicated time.
4. Repeat for each function you wish to program.

Patterns for Traffic Director

(8- and 6-Head Only)

Left, Right, and Center Out functions all use the same pattern

- 1 Standard * (*factory default*)
- 2 6-Head TD with End Flash
- 3 Standard w/End Blink
- 4 Two-Head Traveling
- 5 California Title 13 (**SAE/T13**) **
- 6 California Title 13 Fast (**SAE/T13**)
- 7 Four Head Traveling (**SAE/T13**)
- 8 Snake (**SAE/T13**)
- 9 Snake Pop
- 10 Pop
- 11 Arrowhead on Ends (**SAE/T13**)
- 12 Marquee

* Shortcut Pattern #1 (3 sec/1 flash)

** Shortcut Pattern #2 (6 sec/2 flashes)

Warn Patterns

- 1 Flicker * (*factory default*)
- 2 Slow Singleflash
- 3 Fast Singleflash
- 4 Slow Doubleflash
- 5 Fast Doubleflash
- 6 Slow Tripleflash
- 7 Fast Tripleflash
- 8 Quadflash
- 9 Quintflash
- 10 Tripleflash w/Post Pop
- 11 Quadflash w/Post Pop
- 12 Quintflash w/Pre Pop
- 13 ECE Doubleflash
- 14 ECE Quadflash
- 15 Singleflash Flicker **
- 16 Doubleflash Flicker
- 17 Single, Quad w/Post Pop, Flicker
- 18 Delta-Omega
- 19 Random 1
- 20 Random 2
- 21 Random 3 ***
- 22 Flashing Bounce
- 23 Full Bounce
- 24 Split Bounce
- 25 Half Bounce
- 26 Bounce w/End Pop
- 27 Search Lights
- 28 Eyeballz
- 29 Fade Invert
- 30 Moving Out
- 31 Triple In/Triple Out
- 32 Two Speed (*Pursuit default*)
- 33 Random 4
- 34 Delta X

* Shortcut Pattern #1 (3 sec/1 flash)

** Shortcut Pattern #2 (6 sec/2 flashes)

*** Shortcut Pattern #3 (9 sec/3 flashes)

 Please note: All California Title 13 and SAE J595 approved patterns need to be configured properly to ensure compliance with those specifications.

(Programming CONT'D)

Phase Selection (Programmable for Patterns 1-18 only)

Each head has two Phases, an "On" phase and an "Off" phase. All of the heads set for Phase 1 will illuminate at the same time and flash opposite from all of the ones set for Phase 2.

Prior to changing the Phase for any functions, please note the following limitations:

- The Phase option is only programmable for the Warn Pattern. It is not programmable for the directional functions (Left, Right, or Center Out).
- There are 5 different Phase options, allowing you to customize which heads flash On together and which are Off together.
- The Phase option is only compatible with Warning Patterns 1-18. You cannot alter the Phases for patterns 19-34 (the pre-set phase is crucial to the pattern).

1. Connect the Red wire to power and the Black wire to Ground.
2. For the 8- or 6-Head units, also connect the Orange w/Red wire to +12VDC, which will activate the Warn function.
3. Place the light in **Phase Programming Mode** by holding the Pattern Select wire to +12VDC until the unit flashes once, then twice, then three times, then four times, then five times (15 seconds).
4. Scroll through the 5 optional Phase variations by touching and releasing the Pattern Select wire to GROUND (or Battery Neg).
5. Disconnect power when you are on the Phase you wish to select.

	Head 1	Head 2	Head 3	Head 4	Head 5	Head 6	Head 7	Head 8	
1	Phase 2	Phase 1	(Def 1) 3 sec/1 Flash						
2	Phase 2								
3	Phase 2	Phase 2	Phase 2	Phase 2	Phase 1	Phase 1	Phase 1	Phase 1	
4	Phase 2	Phase 1	Phase 1	Phase 2	Phase 2	Phase 1	Phase 1	Phase 2	
5	Phase 2	Phase 2	Phase 2	Phase 1	Phase 1	Phase 2	Phase 2	Phase 2	

4-Head Units

6-Head Units

Programming (CONTD)

Head Enable

This light also has the ability for the installer to select which heads are active for any given function. You may wish to de-activate several heads in your Warn Pattern to indicate less urgency. Or you may wish to have only a 6 head Traffic Director pattern, allowing the Warn pattern to still flash on the end heads.

This option is programmed separately for the Warn pattern and for the directional patterns.

1. Connect the Red wire to power and the Black wire to Ground.
2. For 8- and 6-Head units also activate the function you wish to program (Warn or directional) by connecting the corresponding wire to +12VDC.
3. Place the light in **Head Enable Programming Mode** by holding the Pattern Select wire to +12VDC until the unit flashes once, then twice, then three times, then four times (12 seconds).
3. Scroll through the 10 optional variations below by touching and releasing the Pattern Select wire to GROUND (or Battery Neg).

*Note: Only options 1 and 2 are available for the 8-Head Traffic Director Functions.
For 6-Head sticks, do not re-program the Directional Pattern Head Enables, always use Option 2.*

4. Repeat for each function you wish to program.

WARN PATTERN HEAD ENABLE CHART

	Head 1	Head 2	Head 3	Head 4	Head 5	Head 6	Head 7	Head 8	
1	ON	(Def 1) 3 sec/1 Flash							
2		ON	ON	ON	ON	ON	ON		
3			ON	ON	ON	ON			
4				ON	ON				
5	ON							ON	
6	ON	ON					ON	ON	
7	ON	ON	ON			ON	ON	ON	
8			ON			ON			
9		ON	ON			ON	ON		
10	ON	ON		ON	ON		ON	ON	

4-Head Units

6-Head Units

DIRECTIONAL PATTERN HEAD ENABLE CHART

	Head 1	Head 2	Head 3	Head 4	Head 5	Head 6	Head 7	Head 8	
1	ON	(Def 1) 3 sec/1 Flash							
2		ON	ON	ON	ON	ON	ON		

Resetting to Factory Default Settings (8- and 6-Head Versions Only)

1. Connect the Red wire to power and the Black wire to Ground.
2. Hold the Pattern Select wire to (Green w/Red) +12VDC until all of the heads light up sequentially from left to right then all flash quickly.
3. Release the Pattern Select wire and the light will be restored to the factory default settings.

Operation

Using your user supplied switches, supply +12VDC to the wires indicated in the wiring diagram on page 2 to activate the desired function.

Please note the following:


- The Red wire **MUST** have +12VDC applied to it for any of the patterns to work.
- The 4-Head units **DO NOT** have a Traffic Director option.
- Activating the Right and Left patterns together will produce the Center-Out Pattern
- Activating the Right or Left pattern (or Center-Out) will override the Warn Pattern
- If you disable any heads for the Traffic Director Patterns (typically heads 1 & 8), and they are enabled for the Warn pattern, activating both functions will operate the Traffic Director pattern and the Warn Pattern will show on those heads.

Service

Removing the Quick Stick From the Harness

Please be aware that the Quick Stick is designed with an internal connector on the harness that can be accessed by removing the two screws securing the endcap and harness. This allows a Quick Stick that needs service to be removed from the vehicle without needing to remove the entire harness.

If you do use this feature, **it is imperative** that the zip tie securing the connection be replaced upon reinstallation to ensure that a good connection is maintained. Because the connector is inside the light stick, extra care must be taken so that it is reinstalled properly. The installer is fully responsible for any issues that may occur as a result of using the disconnect feature. This includes loose connections and pinched wires.

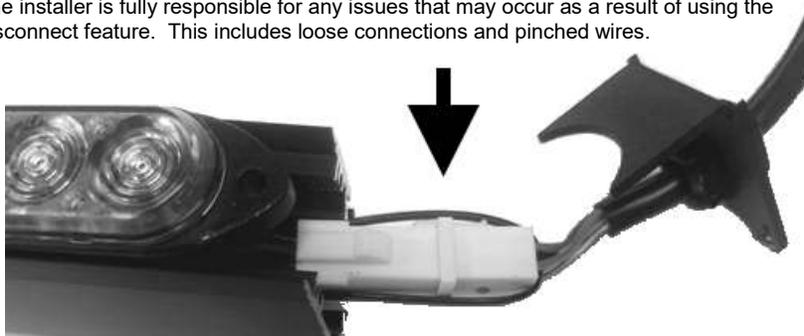

LED FIVE YEAR LIMITED WARRANTY

The manufacturer warrants this LED light against factory defects in material and workmanship for five years after the date of purchase. The owner will be responsible for returning to the Service Center any defective item(s) with the transportation costs prepaid. The manufacturer will, without charge, repair or replace at its option, products, or part(s), which its inspection determines to be defective. Repaired or replacement item(s) will be returned to the purchaser with transportation costs prepaid from the service point. A copy of the purchaser's receipt must be returned with the defective item(s) in order to qualify for the warranty coverage. Exclusions from this warranty include, but are not limited to, domes, and/or the finish. This warranty shall not apply to any light, which has been altered, such that in the manufacturer's judgment, the performance or reliability has been affected, or if any damage has resulted from abnormal use or service.

There are no warranties expressed or implied (including any warranty of merchantability or fitness), which extend this warranty period. **The loss of use of the product, loss of time, inconvenience, commercial loss or consequential damages, including costs of any labor, are not covered.** The manufacturer reserves the right to change the design of the product without assuming any obligation to modify any product previously manufactured.

This warranty gives you specific legal rights. You might also have additional rights that may vary from state to state. Some states do not allow limitations on how long an implied warranty lasts. Some states do not allow the exclusion or limitation of incidental or consequential damages. Therefore, the above limitation(s) or exclusion(s) may not apply to you.

If you have any questions concerning this or any other product, please contact our **Customer Service Department** at (585) 226-9787.

If a product must be returned for any reason, please contact our Customer Service Department to obtain a Returned Materials Authorization number (RMA #) before you ship the product back. Please write the RMA # clearly on the package near the mailing label.



Important: This product is used to **direct** traffic. Improper use may result in vehicular collision, personal injury and/or death. Star Headlight & Lantern Co., Inc., and its subsidiaries shall not be held responsible for damages directly or indirectly caused by improper use of this product. Always carefully consider the effect on traffic that the selected light pattern will have before engaging the lights.

NOTICE

Due to continuous product improvements, we must reserve the right to change any specifications and information, contained in this manual at any time without notice. Star Headlight & Lantern Co., Inc. makes no warranty of any kind with regard to this manual, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Star Headlight & Lantern Co., Inc. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.



PROUDLY MADE IN THE USA
An ISO 9001:2008 Certified Company